


# duolite<sup>®</sup> awnings

South Africa's leading awning suppliers

After first Multiwall sheet and brackets have been secured...

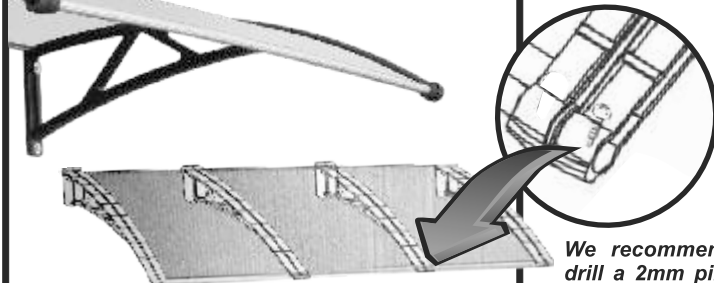

Step 2.2

We recommend that you drill a 2mm pilot hole into the top of awning bracket, when connecting 2 or more awnings together to secure Multiwall sheet. Use self-tapper screw provided for extra support.

 **DURO**plastic

**Head Office - Cape Town**

Libra Close , Brackenfell  
Tel 021 981 1440  
Fax 021 981 1541

**cashback** WHEN **RETURNING EXTRA BRACKET**  
TO YOUR NEAREST DUROSTORE **0860 766 346**  
WHEN 2 OR MORE AWNINGS ARE BOUGHT

INVOICE #


STORE  
PURCHASED FROM

DATE  
OF PURCHASE

For more product information, go to our website: [www.duolite.co.za](http://www.duolite.co.za)

T&C apply. Must present proof of purchase. Bracket not to be used, damaged or older than 3 months from date of purchase.

ES06E

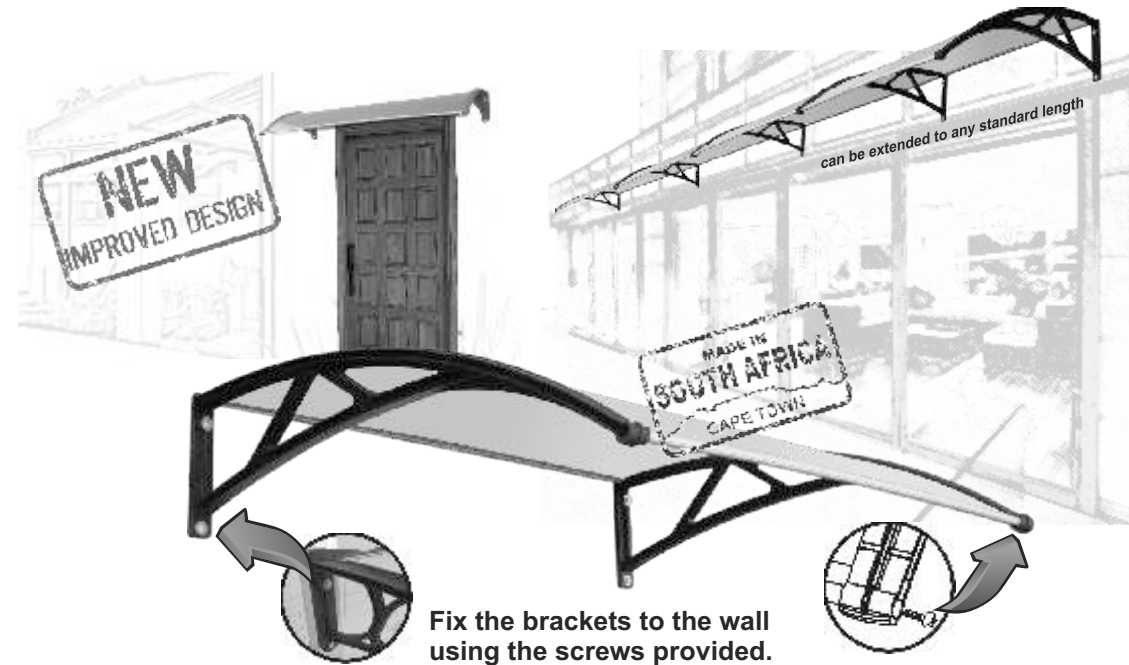

Fix the brackets to the wall using the screws provided.

**Instruction Manual**


**DAP9 - DIY Awning**

Est. 1986 a product of **DURO**plastic

## Tools required



## Contents

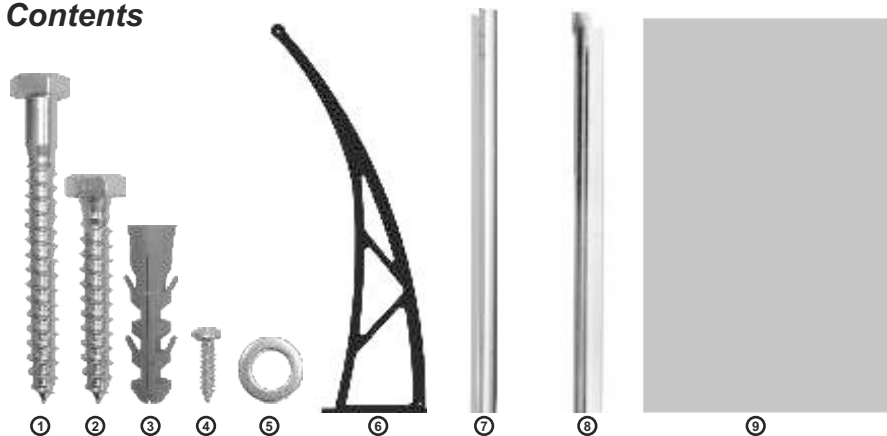

- ① Coach Screw (8x75mm) x2
- ② Coach Screw (8x50mm) x2
- ③ Fisher plug (10mm) x4
- ④ Fixing pozi screws (16mm) to front and back of awning x4


- ⑤ Washer x4
- ⑥ Bracket x2
- ⑦ Front C-channel x1
- ⑧ Back U-channel x1
- ⑨ Duolite sheet x1

## Steps for installation

Slide C- and U-channel onto Duolite sheet.

⑧ Back U-channel

⑦ Front C-channel

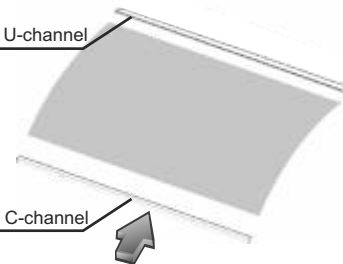

Step 1

**\*\* On the Multiwall sheet there is a neon sticker on the protective cover to indicate which side must face to the sun.**  
**NB: Only remove protective cover after installation.**

**Do not remove Aluminium Foil Tape - it is there to reduce moisture inside flutes.**  
 In the event of moisture ingress, remove foil and blow clear with hair dryer. Close again with Duct Tape / Foil Tape.

Slide Duolite Multiwall sheet into brackets and secure.

Screw #8 into pre-drilled holes in the front and back of bracket

When connecting 2 or more awnings together, follow instructions on the next page.

Step 2.1

Using a spirit level, mark and secure awning to the wall

Note: #1 Coach screws for top holes

Note: #2 Coach screws for bottom holes

Step 3

